


INSTALLATION, USAGE, & CARE GUIDE

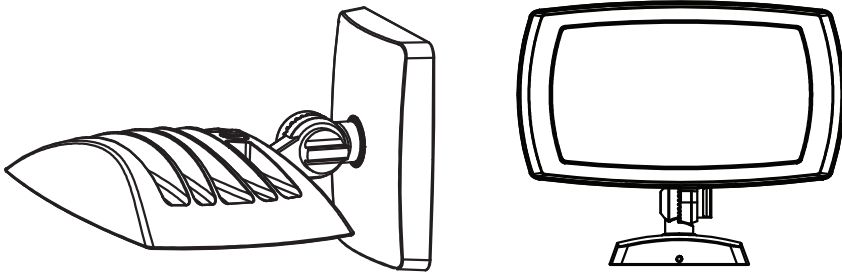

Questions? / Missing Parts? / Need Accessorie

Before returning to the store, call, text, or email
Customer Care 9am-5pm EST Monday to Friday.

1-844-870-5337

info@medinahpower.com

Table of Contents

Table of Contents.....	2	Package Contents.....	4
Safety Information.....	2	Hardware Included.....	4
Warranty.....	2	Installation.....	5
Pre-Installation.....	3	Operation.....	10
Planning Installation.....	3	Care & Cleaning.....	10
Specifications.....	3	Troubleshooting.....	10
Tools Required.....	3		

Safety Information

IMPORTANT

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE NATIONAL ELECTRICAL CODE AND LOCAL BUILDING CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

PRECAUTIONS

- ☐ Please read and understand this entire manual before attempting to assemble, install, or operate this light fixture.
- ☐ This light fixture requires a 120 Volt AC power source.
- ☐ Some codes require installation by a qualified electrician.
- ☐ This light fixture must be properly grounded.
- ☐ Make sure connections are secure using wire nuts, crimp-on lugs or other approved connecting devices
- ☐ This light fixture should be installed outdoors to a wall or to the ground.



WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING: Turn the power off at the circuit breaker or fuse. Place tape over the circuit breaker switch and verify power is off at the light fixture.



WARNING: Risk of fire. Keep the fixture heads at least 3 in. (76 mm) from combustible materials.



CAUTION: Burn hazard. Allow the light fixture to cool before touching.

Warranty

This product carries a limited five-year warranty from the date of purchase. It is warranted to be free from defects in material and workmanship. This warranty covers product replacement and applies only to the original purchaser with valid proof of purchase. The warranty does not cover products altered or repaired by unauthorized personnel, subjected to neglect, misuse, or damage during shipping. It excludes damages from replacement bulbs, LEDs, corrosion, or brass discoloration.

Limitation of Liability:

Liability is limited to the purchase price of the product. Indirect, incidental, or consequential damages, lost profits, and labor charges for installation or removal are not covered.

To Claim:

Call 1-844-870-5337 or email info@medinahpower.com with your name, address, contact number, proof of purchase, and a brief issue description.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to: (1) this device may not cause harmful interference, and (2) it must accept any interference received, including interference that may cause undesired operation. Tested and found to comply with Class B digital device limits, providing reasonable protection against harmful interference in a residential installation. If interference to radio/TV reception occurs, try reorienting the antenna, increasing separation, using a different outlet circuit, or consult a technician.

Pre-Installation

PLANNING INSTALLATION

Before installing the light fixture, ensure that all parts are present. Compare parts with the Hardware Included and Package Contents sections. If any part is missing or damaged, do not attempt to assemble, install, or operate this light fixture.

SPECIFICATIONS

MODEL	FSNX50	FSNX80
Lumens (Light Output)	5000 Lumens	8000 Lumens
Watts (Power Consumption)	45 Watts LED	75 Watts LED
Replaces	150W Incandescent	200W Incandescent
Lumens/Watts (Efficacy)	111 Lumens per watt	107 Lumens per watt
Power Requirements (Input Voltage)	120 VAC	
Light Color (CCT)	4000 Kelvin (Bright White)	
Dimmable	Non-Dimming (Do not wire to dimming switch)	
Operating Modes	Switch-Controlled: Flip switch to turn light fixture ON and OFF. Use external photocell light sensor, timer or motion sensor for automatic functionality (sold separately)	

TOOLS REQUIRED



Phillips
screwdriver



Wire
strippers/
cutters



Circuit
tester



Silicone
sealant



Work gloves




Ladder



Safety
goggles

Pre-Installation (continued)

PACKAGE CONTENTS

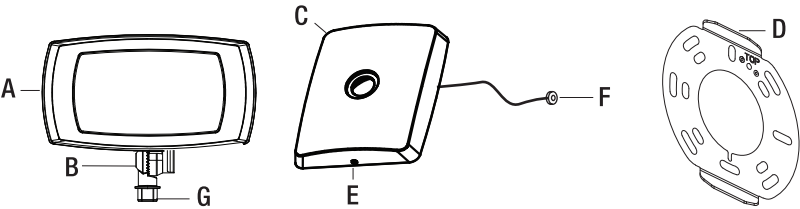

Part	Description	Quantity
A	Light fixture	1
B	1/2 in. NPS Threaded knuckle mount stem	1
C	Wall/Eave mounting plate cover	1
D	Mounting plate (shipped installed)	1
E	Mounting plate set screw	1
F	Hands-free mounting wire	1
G	Conduit lock nut for knuckle mount	1
H	Remote control	1

 


NOTE: Alternate mounting accessories are not provided in the box.
They are available separately from your retailer.

HARDWARE KIT



NOTE: Hardware not shown to actual size.




Part	Description	Quantity
AA	#8-32 x 3/4 in. Philips head screw	2
BB	Wire nut	3
CC	Allen key	1
DD	Wing nut for wall mount plate	1
EE	Lock washer	1
FF	Sealing gasket	1
GG	Clear photocell cover	1

Installation


1 For best results

- ☐ Install light 6-15 feet above the ground for wall applications or on ground for flood application.
- ☐ The fixture can be mounted in multiple ways:
 - A. Wall/Eave Mount:** Use the mounting plate cover (C) and the mounting plate (D) over a junction box. See (fig 1) and (fig 2).
 - B. Swivel Knuckle Flood Mount:** Can be used with a domed cover plate (not provided) on a junction box or landscape ground post (not provided). See (fig 3) and (fig 4).
- ☐ Do NOT wire to a dimming switch.

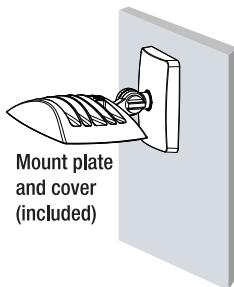

Mount plate and cover (included)

Wall Mount
(fig 1).

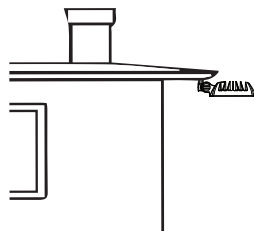

Eave Mount
(fig 2).



Mounted to domed cover plate with center hole
(fig 3).



 
Mounted to landscape post (sold separately)
(fig 4).




IMPORTANT INFORMATION: Domed cover plates for junction boxes, landscape posts, and other mounting arms and accessories are available. Please contact your retailer or Commercial Electric customer support.

2 Shut off electric power off


- ☐ Verify the wall switch is in the OFF position (fig 5).
- ☐ At the main electrical panel, turn off the circuit breaker that supplies power to the junction box you are working on (fig 6).
- ☐ For screw-in type fuses, unscrew the fuse that supplies power to the junction box you are working on (fig 7).



(fig 5).

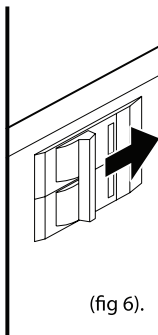

(fig 6).

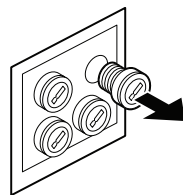

(fig 7).

Installation (continued)

3 OPTION: Assemble the wall/eave mounting plate cover

(for wall/eave mounting over standard recessed junction box)




NOTE: The fixture comes with the knuckle stem and the wall/eave mounting base plate cover (C) in the box.


- ☐ Place the sealing gasket (FF) on the knuckle stem and thread wires through the hole of the wall/eave mounting plate cover (C), being careful not to pinch the wires. (fig 8)
- ☐ Pass the fixture's threaded stem (B) through the center hole of the mounting plate cover (C). Secure with the lock washer (EE) and tighten with the wing nut (DD). (fig 9)




IMPORTANT: Adjust the desired left to right orientation of the fixture head (A) on the wall/eave mounting plate cover (C) at this step. (fig.10)

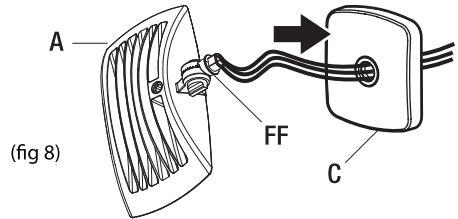

(fig 8)

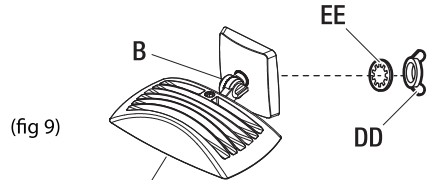

(fig 9)

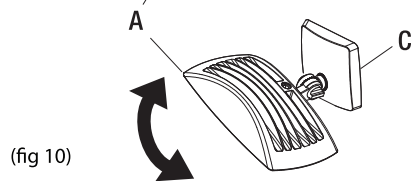

(fig 10)


4 Option: Mount to surface mount junction box or landscape ground post

For Ground and Wall/Eave Mounting




NOTE: The fixture comes with the 1/2 in. threaded NPS swivel knuckle stem (B) and is compatible with standard domed junction box covers and landscape ground posts which are sold separately.

- ☐ Place wires through the hole in the domed junction box cover or landscape ground post (fig 11) and (fig 12).
- ☐ Place the conduit lock nut (G) on the back side of the domed cover.
- ☐ Screw the 1/2 in. NPS threaded knuckle mount (B) into the center hole of the domed plate or landscape post and, if the hole is not threaded, use the conduit lock nut (G) to tighten the fixture into place.
- ☐ Use provided hex head screwdriver to loosen the bolt in the center of the knuckle mount and select the desired angle. Tighten the screw to secure into place.

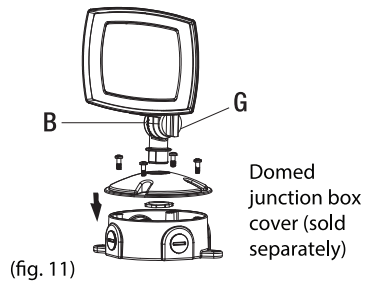

(fig. 11)

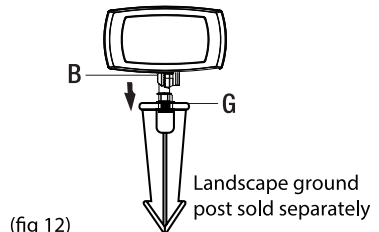


(fig 12)




5 Attach the mounting plate to junction box

(for wall/eave mounting over standard recessed junction box)

- ☐ To remove the mounting plate (D) from the back of the fixture, loosen the set screw (E) using the hex head allen key (CC). (fig 13)
- ☐ Align the holes of the mounting plate (with the "TOP" marking oriented upwards OR closest to wall if eave mounted) with the junction box. Secure the mounting plate (D) to the junction box with the two #8 screws (AA). (fig 14)

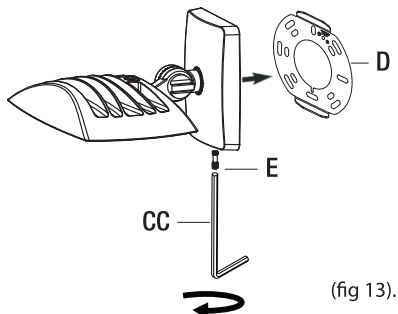

(fig 13).

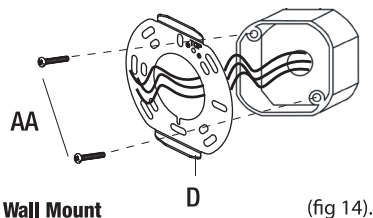  


(fig 14).

6 Attach hands-free wire

(for wall/eave mounting over standard recessed junction box)

- ☐ Take the round "ball" head of the hands-free wire (F), attached to the back of the mounting plate cover, and place it behind the bottom-center "notch" of the mounting plate (D).
- ☐ Ensure the fixture can now hang freely to allow for hands-free connection of the electrical wires.

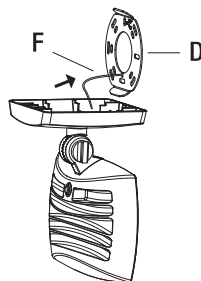


Wall/Eave Mount

(fig 15).


7 Make the electrical connections

- ☐ If necessary, strip 3/8 in. of insulation from the junction box and lighting fixture wires.
- ☐ Connect wires by twisting the exposed wires together and using the wire nuts (BB). Ensure there are no loose wires.
- ☐ Connect the lighting fixture black wire to the junction box black wire (line), the lighting fixture white wire to the junction box white wire (common), and the junction box ground wire to the green lighting fixture ground wire.

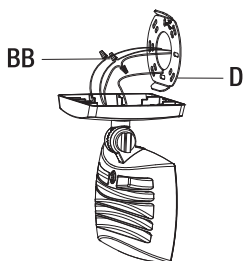



Wall Mount

(fig 16).

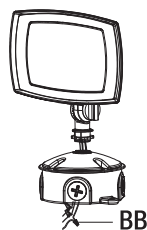

Swivel Knuckle Flood/
Surface Mount

 (fig 17).

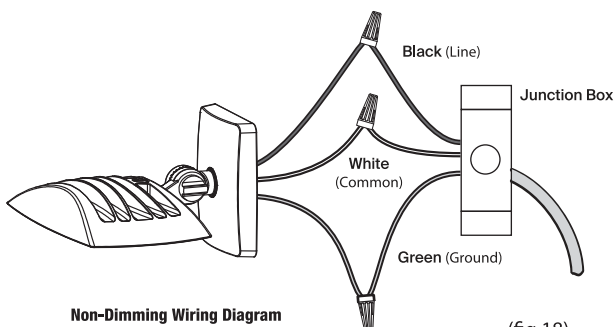

Non-Dimming Wiring Diagram

(fig 18).




TIP: Hold stripped ends near each other and align any frayed strands (do not twist wires).

Push the wires into the wire nut (BB) and use your fingers to twist the wire nut clockwise until tight. Check for tightness by pulling wires.

8 Secure the fixture and wiring

(For wall/eave mount over standard recessed junction box)

- ☐ Once the fixture is wired, place the fixture on the mounting plate. Use the hex head allen key (CC) to tighten the set screw (E) to secure the fixture to the mounting plate (D).
- ☐ Ensure no wires are pinched between the mounting plate cover (C) and mounting surface.

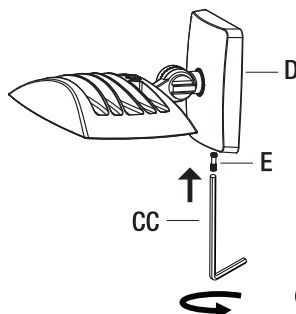


(fig 19).




NOTE: After electrical connections are made, un-hook the hands-free wire (F) and then mount the fixture onto the mounting plate (D).

9 Seal with caulking

- ☐ For recessed junction box mounting, caulk around the back face of the light fixture shown in (fig 20) with silicone sealant (not included).
- ☐ For surface mount junction box applications, caulk between the junction box and mounting plate with silicone sealant (not included) as shown in (fig 21).

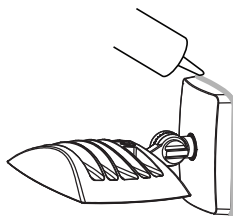

(fig 20).

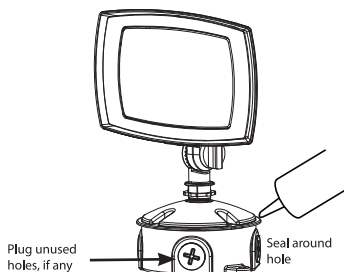

Swivel Knuckle Flood Mount



(fig 21).



NOTICE: Failure to properly caulk around the back face of the light fixture and mounting surface could lead to water damage and is not covered under warranty.

10 Adjust the lamp head and test

- ☐ Loosen the screw on the swivel portion of the knuckle (B), adjust the fixture to a suitable orientation, and then tighten the screw.
- ☐ Test the fixture by restoring power to the breaker and light switch. Verify that the light fixture illuminates. Adjust the light angle as needed.

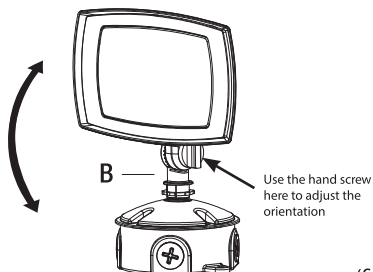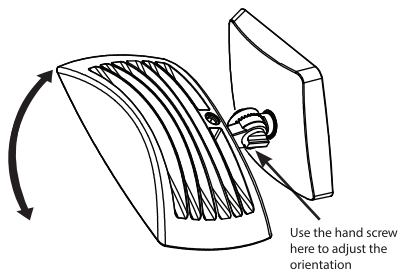

(fig 22).

Operation

SWITCH-CONTROLLED

Switch-controlled operation enables the light fixture to turn ON and OFF by flipping a standard light switch. Dusk-to-Dawn control requires the addition of an external photocell, sensors or timer (sold separately).

SWITCH



CONTROLLED

- ☐ Once the fixture is installed, turn power back on from the circuit breaker and switch.
- ☐ Flip the switch ON and OFF to ensure the light functions properly.



NOTE: This fixture is not dimmable, so it is best to not wire to a dimming switch.

Care and Cleaning

- ☐ Shut off main power supply before cleaning the product. To prolong the original appearance, clean the light fixture with clear water and a soft, damp cloth only.
- ☐ Do not use abrasive cleaners or cleaners that contain alcohol. Do not apply paints, solvents, or any other chemicals on this light fixture. They could cause a premature deterioration of the finish and may void the warranty.
- ☐ Do not spray the light fixture with a hose or power washer.

Troubleshooting

If Light does not come on:

- ☐ Verify that the power is turned ON from the circuit breaker and wall switch.
- ☐ Verify the wiring for the fixture is done properly.
- ☐ Verify the line voltage is correct.

If Light flickers:

- ☐ Do not wire to a dimming switch. Use a standard ON/OFF switch.

Questions? / Missing Parts? / Need Accessories?

Before returning to the store, call or email our
Lighting Specialists 9am-5pm EST Monday to Friday.

1-844-870-5337

info@medinahpower.com